



您好!

Y887

户外便携式蓝牙音箱
使用说明

1

尊敬的AWEI用户:

感谢您选用AWEI产品! 您的选择对于我们至关重要, 这意味着AWEI又增加了一名新用户。希望通过我们的产品和服务, 为您带来上佳的体验。也希望您在产品体验过程中, 通过官方客户热线、微博、微信、等提出好的意见和建议, 帮助AWEI不断完善产品和服务。

如果您在产品使用过程中遇到任何问题, 请参照服务流程, 方便、快捷地获取帮助。您的支持是我们成长的动力, 您的每一次认可和评价都是对AWEI莫大的鼓励。谢谢!

AWEI营销团队

介绍

 
非常感谢您使用AWEI Y887户外便携式蓝牙音箱, 在使用本产品之前, 请仔细阅读本手册。

蓝牙无线通信的技术介绍

蓝牙是一种支持设备短距离通信 (通常在10M内) 的无线电技术。能在包括手机、无线耳机、电脑等众多IT数码设备之间进行无线信息交换。利用“蓝牙”技术能有效地简化设备之间的通信, 数据传输从而变得更加迅速高效。



附件清单

1X 蓝牙音箱
1X USB充电线

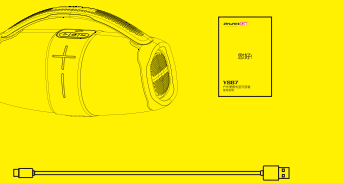

2

  音箱说明图

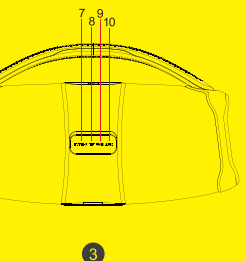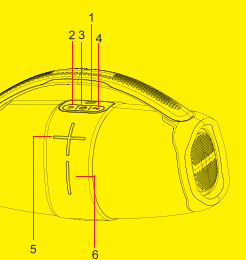

按键说明

1. 开机按键
长按开/关机 约3秒/次
2. 暂停/播放键
单击: 播放/暂停
长按: 退出/回连蓝牙连接
蓝牙模式下双击为回拨电话; 单击: 接听/挂断
来电情况下长按2秒为拒接电话
在收音机模式下 单击: 静音 长按: 收音
3. 灯按键
单击: 切换灯光模式
长按: 开/关灯
4. 串联键
单击: 串联/退出串联
长按: 转换模式
5. +键
单击: 音量加
长按: 下一曲
6. -键
单击: 音量减
长按: 上一曲
7. Type-C 插孔
1. 充电线接口, 插入Type-C充电线时, 默认为设备充电
无线配对状态: 白灯常亮
播放状态: 白灯灯慢闪 约1秒/次;
8. TF插孔
插入TF卡时, 默认为TF卡播放模式
9. USB插孔
插入U盘时, 默认为USB播放模式
10. AUX 插孔
标准Φ3.5mm耳机插孔, 插入时, 默认为AUX播放模式

4

怎样使用

1. 无线配对
1.1. 使用无线配对前, 首先打开音频电源, 它已经是默认的无线模式。
1.2. 打开无线设备, 搜索 AWEI Y887, 连接配对, 连接成功后, 开始播放音乐体验。
2. 适用于各种手机配件无线技术, 无线适配器, 无线播放器。
3. 语音提示
3.1. 开/关机有语音提示音;
3.2. 音量加到最大音量有语音提示, 最小音量无语音提示。
3.3. 检测到3.4V低电提示3次后关机;
4. 模式切换
4.1. 开机默认进入无线模式, 模式切换顺序: 无线模式-FM模式-TF卡模式-U盘模式-AUX模式
4.2. 模式: 后插优先。
5. 播放指示灯
无线搜索状态: 白灯快闪, 约0.5秒/次;
无线配对状态: 白灯常亮
播放状态: 白灯灯慢闪 约1秒/次;
6. 充电指示灯
充电为3颗流水灯从左至右闪烁
电量30%第1颗常亮2.3..颗闪烁
电量40%第1-2颗常亮3颗闪烁
电量100%第1-2-3颗常亮
7. 音量
开机默认音箱70%音量。

5

怎样使用

8. 充电使用:
本机内置过充保护电路, 可长时间连接电脑或充电器, 约四小时即可完成充电。每个电池的播放时间会因使用不同大小的音量而有所不同。
 9. 无工作状态, 15分钟后自动关机。
- #### 故障排除:
1. 自动关机: 电池电量不足时会自动开启电池保护, 请充电4小时后使用。
 2. 无法播放音乐: 音乐文件存储路径不能被播放器识别, 音乐文件请存储在可移动设备的根目录下。
 3. 连接电脑无声: 电脑界面连接错误, 请选择正确的音频输出端口
 4. 按键无反应或功能错乱: 关机后重试。
 5. 当机器出现异常情况时, 可用细长圆棒, 按压AUX孔内的复位开关复位

6

产品规格

蓝牙版本: V5.3
播放模式: 蓝牙、AUX、TF卡、U盘、FM
喇叭规格: 66mm 4Ω
喇叭功率: 10Wx2
充电电压: 5V/1A
频率响应范围: 80Hz~15KHz
电池容量: 3600mAh / 3.7V
工作时长: 约 5 小时
充电时长: 约 4小时
蓝牙传输距离: 10M

7

安全与保养

在使用时, 请阅读以下建议有助于您遵守保修条款, 并延长产品的使用寿命。

- ★ 保持产品干燥, 勿将产品放在潮湿的地方, 以免影响产品内部电路;
- ★ 不要将产品放置在太阳直射或者高温的地方, 高温会缩短电子部件的使用寿命损坏电池, 使某些塑料部件变形;
- ★ 不要将产品放在过冷的地方, 以免损坏内部电路板
- ★ 不要试图拆开产品, 尤其是非专业人员, 可能会损坏产品;
- ★ 不要跌落、强烈震动、用硬体撞击产品, 以免损坏内部电路;
- ★ 不要使用烈性化学制品、清洁剂清洁机器;
- ★ 不要用尖体在产品表面上乱划, 以免损坏外壳和影响外观;
- ★ 不要对机器连续充电超过10小时, 以免影响使用寿命; 如产品不能正常工作, 请将其送至AWEI的授权维修机构, 工作人员会热心帮您解决问题。

声明: 为提高产品性能我们会进行产品升级, 本说明内容可能会有所变更, 恕不另行通知, 敬请见谅。感谢您的选购!

8

香港雅乐国际有限公司 监制
深圳市雅乐电子有限公司 出品
厂址: 中国深圳市龙华区大浪裕景泰科技工业园

消费者服务热线/传真:
服务热线: 400-998-3899
合作邮箱: yale@awei.hk
售后服务: service@awei.hk

获取更多信息请访问:
www.awei.hk



官方微信查真伪

国外社区:
twitter : <https://www.twitter.com/Aweiglobal>
facebook : <https://www.facebook.com/aweiproducts>
instagram : https://www.instagram.com/awei_official

9

产品售后服务指南

一、七天包退细则

A. 包退原则: 用户在AWEI直属专营店或经AWEI授权的分销店所购买的产品, 自购买之日起7天内, 产品未受到任何人为或外力的损害而发生的产品质量问题, 厂家包退货。
B. 退货流程: 用户将产品、包装和票据完整地拿到 (或自费邮寄到) 购买地点给卖家检测——卖家按质保鉴定规则检测, 鉴定该产品属产品质量问题——卖家退还用户购买产品时所付的费用。

二、十五天包换细则

A. 包换原则: 用户在AWEI直属专营店或经AWEI授权的分销店所购买的产品, 自购买之日起15天内, 产品未受到任何人为或外力的损害而发生的产品质量问题, 厂家包换货。
B. 换货流程: 用户将产品、包装和票据完整地拿到 (或自费邮寄到) 购买地点给卖家检测——卖家按质保鉴定规则检测, 鉴定该产品实有产品质量问题——卖家为用户更换货品并开具新票据。

三、十二个月包修细则

A. 包修原则: 用户在AWEI直属专营店或经AWEI授权的

10

产品售后服务指南

分销店所购买的产品, 自购买之日起十二个月内, 产品未受到任何人为或外力的损害而发生的产品质量问题, 厂家包修。

B. 包修流程: 用户将产品、包装和票据完整地拿到 (或自费邮寄到) 购买地点给卖家检测——卖家按质保鉴定规则检测, 鉴定该产品有产品质量问题——卖家填写产品质保卡并加盖公章——卖家将产品邮寄给厂家维修——厂家维修好邮寄给卖家——卖家通知用户取货。

四、质保鉴定规则

A. 无质保产品: 包装盒、收纳袋、耳机夹、耳套等附属部件; 不在三包期内的产品; 非AWEI授权或非正规渠道所购买的产品; 非AWEI正品; 赠品; 被人为损害的产品; 被外力损害的产品。

B. 质保鉴定: 查三包期 (以票据为证)——查正品 (进AWEI官方网站查防伪编码)——查产品损坏情况 (有无明显人为造成的破损、有无被水、火、化学物品或重物损害的痕迹)——查产品质量 (在符合产品使用的情况下测试效果是否与产品描述相符)——查购买渠道 (限厂家查证)

11

AWEI产品保修卡 (请认真填写完整)

产品型号		条形码	
用户名字		用户电话	
用户住址			
商家名称		商家电话	
商家地址			
购买日期		报修日期	
损坏情况		维修时间	
备注			



For all kinds of music

Hello!

Y887 Outdoor Portable Bluetooth Speaker User Manual

Dear AWEI User,
Thank you for choosing AWEI product. Your choice is crucial for us, which means AWEI has added a new user. Hope that we will bring you a good experience through our products and services. Also hope you will put forward the good advice and suggestions by official customer hotline, Weibo and Wechat in the process of product experience, which can help AWEI to constantly improve product and service.

If you encounter any problems in the using product, please refer to service process. Your support is our strongest power, also your recognition and evaluation are a great encouragement to AWEI. Thank you!

AWEI sales team

Introduction

Thank you very much for using the AWEI Y887 Outdoor Portable Bluetooth Speaker, please read this manual in detail before using this product.

Bluetooth wireless communications Technology introduction

 
 
Bluetooth is a kind of wireless technology which support short distance communications (work normally within a distance of 10M) with it you can exchange information by wireless between many IT digital devices like mobile phones / wireless earphones / computers etc. Bluetooth technology effectively and simplify to the communications which makes device and data transmission quickly and off effectively.

Accessories List

1X Bluetooth Speaker 1X User Manual
1X USB Charging Cable



Overview Of Speaker

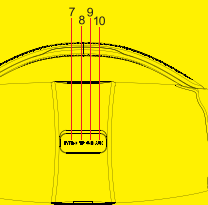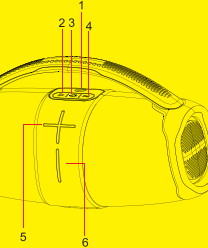

Key description

- Power on button
1.1. Before using wireless pairing, first turn on the audio power, it is already the default wireless model.
- Pause/play key
Click: Play/Pause
Long press: Exit/reconnect Bluetooth connection
Double click in Bluetooth mode to call back; Click: answer/end

In case of a call, long press for 2 seconds to reject the call
In radio mode, click: mute Long press: receive music experience.

- Suitable for various mobile phone accessories wireless technology, wireless adapter, wireless player.
- Voice prompt

3.1. There is a voice prompt when turning on/off;
Click: Convert light mode
Long press: Turn lights on/off

- Serial key
Click: Tandem/Exit Tandem
Long Press: Convert Mode

5. +key
Click: Volume up
Long press: next song

- key
Click: Volume Down
Long press: Previous song

7. Type-C jack
1. Charging line interface. When the Type-C charging line is inserted, the device is charged by default

2. When using the radio function, you need to plug in the charging line as the radio antenna, The radio function can be used normally

8. TF jack
When the TF card is inserted, the default is the TF card playing mode

9. USB connector
When the USB stick is inserted, it defaults to USB playback mode

10. AUX jack
Standard Φ 3.5mm headphone jack, which defaults to AUX playback mode when plugged in

How To Use

- Wireless pairing
1.1. Before using wireless pairing, first turn on the audio power, it is already the default wireless model.
2. Turn on the wireless device, search for AWEI Y887, connect and pair, connect After success, start playing music experience.

2. Suitable for various mobile phone accessories wireless technology, wireless adapter, wireless player.

- Voice prompt

3.1. There is a voice prompt when turning on/off;
Click: Convert light mode
Long press: Turn lights on/off

- Serial key
Click: Tandem/Exit Tandem
Long Press: Convert Mode

5. +key
Click: Volume up
Long press: next song

- key
Click: Volume Down
Long press: Previous song

7. Type-C jack
1. Charging line interface. When the Type-C charging line is inserted, the device is charged by default

2. When using the radio function, you need to plug in the charging line as the radio antenna, The radio function can be used normally

8. TF jack
When the TF card is inserted, the default is the TF card playing mode

9. USB connector
When the USB stick is inserted, it defaults to USB playback mode

10. AUX jack
Standard Φ 3.5mm headphone jack, which defaults to AUX playback mode when plugged in

How To Use

- Wireless pairing
1.1. Before using wireless pairing, first turn on the audio power, it is already the default wireless model.
2. Turn on the wireless device, search for AWEI Y887, connect and pair, connect After success, start playing music experience.

2. Suitable for various mobile phone accessories wireless technology, wireless adapter, wireless player.

- Voice prompt

3.1. There is a voice prompt when turning on/off;
Click: Convert light mode
Long press: Turn lights on/off

- Serial key
Click: Tandem/Exit Tandem
Long Press: Convert Mode

5. +key
Click: Volume up
Long press: next song

- key
Click: Volume Down
Long press: Previous song

7. Type-C jack
1. Charging line interface. When the Type-C charging line is inserted, the device is charged by default

2. When using the radio function, you need to plug in the charging line as the radio antenna, The radio function can be used normally

8. TF jack
When the TF card is inserted, the default is the TF card playing mode

9. USB connector
When the USB stick is inserted, it defaults to USB playback mode

10. AUX jack
Standard Φ 3.5mm headphone jack, which defaults to AUX playback mode when plugged in

How To Use

- Wireless pairing
1.1. Before using wireless pairing, first turn on the audio power, it is already the default wireless model.
2. Turn on the wireless device, search for AWEI Y887, connect and pair, connect After success, start playing music experience.

2. Suitable for various mobile phone accessories wireless technology, wireless adapter, wireless player.

- Voice prompt

3.1. There is a voice prompt when turning on/off;
Click: Convert light mode
Long press: Turn lights on/off

- Serial key
Click: Tandem/Exit Tandem
Long Press: Convert Mode

5. +key
Click: Volume up
Long press: next song

- key
Click: Volume Down
Long press: Previous song

7. Type-C jack
1. Charging line interface. When the Type-C charging line is inserted, the device is charged by default

2. When using the radio function, you need to plug in the charging line as the radio antenna, The radio function can be used normally

8. TF jack
When the TF card is inserted, the default is the TF card playing mode

9. USB connector
When the USB stick is inserted, it defaults to USB playback mode

10. AUX jack
Standard Φ 3.5mm headphone jack, which defaults to AUX playback mode when plugged in

Specifications

- Bluetooth Version: V5.3
Input Mode: Bluetooth, AUX, TF Card, U Disk, FM
Speaker Full Range Unit: 66mm 4 Ω
Speaker Power: 10W x 2
Charging Voltage: 5V/1A
Frequency Response: 80Hz-15KHz
Battery Capacity: 3600mAh / 3.7V
Working Time: about 5 hours
Charging Time: about 4 hours
Bluetooth Transmission Distance: 10M

2. Suitable for various mobile phone accessories wireless technology, wireless adapter, wireless player.

- Voice prompt

3.1. There is a voice prompt when turning on/off;
Click: Convert light mode
Long press: Turn lights on/off

- Serial key
Click: Tandem/Exit Tandem
Long Press: Convert Mode

5. +key
Click: Volume up
Long press: next song

- key
Click: Volume Down
Long press: Previous song

7. Type-C jack
1. Charging line interface. When the Type-C charging line is inserted, the device is charged by default

2. When using the radio function, you need to plug in the charging line as the radio antenna, The radio function can be used normally

8. TF jack
When the TF card is inserted, the default is the TF card playing mode

9. USB connector
When the USB stick is inserted, it defaults to USB playback mode

10. AUX jack
Standard Φ 3.5mm headphone jack, which defaults to AUX playback mode when plugged in

Safety And Maintenance

- Please read suggests below in order to helping prolong the product lifespan and clearly understand the warranty clauses.
★ Keep the product dry, do not put it in humid circumstance to avoid short circuit.
★ Do not expose it to the sun or high heat. High heating will short lifespan of electronic components, damage battery and deform some plastic parts.
★ Do not put it in cold circumstance to avoid damage to PCB board.
★ Do not attempt to take apart the product, especially non-professionals.
★ Do not fall, vibrate strongly, strike with hard objects, to avoid damage to inner electronic circuit.
★ Do not use high chemical products, detergent to clean the item.
★ Do not scratch the surface with sharp items to avert damaging the case and appearance.
★ Do not make it charging 10 hours continuously for the sake of lifespan.

If the product can not work properly, please send it to AWEI authorized maintenance agents. Our staff will help to solve the problems for you.

- Statement: In order to improve product performance we will upgrade products, the content may change without notice, pls forgive! Thank you for your purchase.

2. Suitable for various mobile phone accessories wireless technology, wireless adapter, wireless player.

- Voice prompt

3.1. There is a voice prompt when turning on/off;
Click: Convert light mode
Long press: Turn lights on/off

- Serial key
Click: Tandem/Exit Tandem
Long Press: Convert Mode

5. +key
Click: Volume up
Long press: next song

- key
Click: Volume Down
Long press: Previous song

7. Type-C jack
1. Charging line interface. When the Type-C charging line is inserted, the device is charged by default

2. When using the radio function, you need to plug in the charging line as the radio antenna, The radio function can be used normally

8. TF jack
When the TF card is inserted, the default is the TF card playing mode

9. USB connector
When the USB stick is inserted, it defaults to USB playback mode

10. AUX jack
Standard Φ 3.5mm headphone jack, which defaults to AUX playback mode when plugged in

Products after-sales service

- 7 Days Refund Policy
A. Guarantee of Refund: Within 7 days since the date of purchase, the manufacturer promises to refund if the product bought from AWEI immediate shops or authorized distributor shops is in quality problem (artificial and external force damage excluded).
B. Refund Procedure: Please take the product, whole set of package and original invoice to (or please freight pre-paid to) the shop you bought the product for checking. The seller will check by Quality Assurance Identification Rules to clarify the problem. If yes, the seller should refund the money the user paid for the product.

2. 15 Days Replacement Policy
A. Guarantee of Replacement: Within 15 days since the date of purchase, the manufacturer promises to replace if the product bought from AWEI immediate shops or authorized distributor shops is in quality problem (artificial and external force damage excluded).
B. Replacement Procedure: Please take the product, whole set of package and original invoice to (or please freight pre-paid to) the shop you bought the product for checking. The seller will check by Quality Assurance Identification Rules to clarify the problem. If yes, the seller should replace the product and issue a new invoice to the user. Freight arrangements please check with the shop you contact.

- Twelve Months Warranty Policy
A. Guarantee of Maintenance: Within twelve months since the date of purchase, the manufacturer promises to offer

Products after-sales service

- maintenance service if the product bought from AWEI immediate shops or authorized distributor shops is in quality problem (artificial and external force damage excluded).
B. Maintenance Procedure: Please take the product, whole set of package and original invoice to (or please freight pre-paid to) the shop you bought the product for checking. The seller will check by Quality Assurance Identification Rules to clarify the problem. If yes, the seller should fill warranty card with official stamp and send back to manufacturer. After repairing, manufacturer sends the product to the seller and the seller should inform the user to collect it. Freight arrangements please check with the shop you contact.

4. Quality Assurance Identification Rules
A. Quality Assurance is NOT applicable to those items: accessories like packing box, pouch, ear clip and earmuffs; product beyond warranty period; product got from unauthorized agents or informal channels; fake AWEI product; AWEI premium; artificial damaged product; external force damaged product.
B. Quality Assurance Identification Procedure: Check warranty period (by original invoice) — confirm original product (check security code on AWEI official website) — check product damage (clarity artificial damage and external force like water, fire, chemicals or weight crush damages) — check product quality (to confirm if the testing result is conform to description) — check buying channel (subject to manufacturer's verification).

AWEI Warranty Card (please fill this carefully)

Model No.		Barcode	
User Name		TEL	
Address			
Seller		Seller Tel	
Seller Add			
Date of purchase		Date for Maintenance	
Damage situation		Maintenance time	
Remark			